

SICO CAM-LOCK PARQUET DANCE FLOOR

If you like the beauty of SICO's ORIGINAL Wood Parquet Dance Floor and prefer the locking feature of the STARLIGHT Dance Floor, the CAM-LOCK PARQUET DANCE FLOOR is ideal for you. Enjoy the elegance of real wood along with the positive cam-lock panel system.

CAM-LOCK Parquet Dance Floor has all the benefits of the original dance floor plus these unique features:

- CAM-LOCK allows you to automatically align panels and trim pieces together for a faster and more secure fit.
- A half-turn with an Allen wrench is all that is necessary to lock or unlock panels, reducing the time and labor required to lay down a dance floor.
- It's easy to assemble because there is no panel order sequence to follow.
- Panels are 3' x 3' (914mm x 914mm). No odd sizes to deal with, allowing easier set up.
- CAM-LOCK's reliable positive locking system is not dependent upon magnets or gravity to keep panels interlocked.
- Panels weigh 40 lbs. (18kg) and are shipped two per carton at 80 lbs. (36kg).
- 10-year warranty of Cam-Lock mechanism. 3-year warranty on all other parts.



SICO's dance floor caddy easily holds up to 25 ORIGINAL, or CAM-LOCK, panels and trim.

With SICO's CAM-LOCK Parquet Floor, you can enjoy the elegance of real wood along with the security of this positive panel locking system. This system automatically aligns panels and trim pieces together for a faster and more secure fit.



HOW MUCH DANCE FLOOR DO YOU NEED?*

* Assume that only one-third of your guests will dance, so the number of dancers shown in these graphs is only 33% of your total guests.

STARLIGHT and CAM-LAM Dance Floor Panels

4 ft. x 4 ft. (122cm x 122cm)

FLOOR SIZE	NUMBER OF PANELS	NUMBER OF DANCERS	NUMBER OF CADDIES
8'x 8' (244cm x 244cm)	4	16	1
8'x12' (244cm x 366cm)	6	24	1
8'x16' (244cm x 488cm)	8	32	1
12'x16' (366cm x 488cm)	12	48	1
12'x20' (366cm x 610cm)	15	60	1
16'x16' (488cm x 488cm)	16	64	1
16'x20' (488cm x 610cm)	20	80	1
16'x24' (488cm x 732cm)	24	96	1
16'x28' (488cm x 853cm)	28	112	2
16'x32' (488cm x 975cm)	32	128	2
20'x20' (610cm x 610cm)	25	100	1
20'x24' (610cm x 732cm)	30	120	2
20'x28' (610cm x 853cm)	35	140	2
20'x32' (610cm x 975cm)	40	160	2
24'x32' (732cm x 975cm)	48	192	2
24'x36' (732cm x 1097cm)	54	216	3
28'x32' (853cm x 975cm)	56	224	3
32'x32' (975cm x 975cm)	64	256	3
32'x36' (975cm x 1097cm)	72	288	3
36'x36' (1097cm x 1097cm)	81	324	4
36'x40' (1097cm x 1219cm)	90	360	4
40'x40' (1219cm x 1219cm)	100	400	4

ORIGINAL and CAM-LOCK Dance Floor Panels

3 ft. x 3 ft. (91cm x 91cm)

FLOOR SIZE	NUMBER OF PANELS	NUMBER OF DANCERS	NUMBER OF CADDIES
6'x9' (183cm X 274cm)	6	12	1
9'x9' (274cm x 274cm)	9	18	1
9'x12' (274cm x 366cm)	12	24	1
9'x15' (274cm x 457cm)	15	30	1
12'x12' (366cm x 366cm)	16	32	1
12'x15' (366cm x 457cm)	20	40	1
12'x21' (366cm x 640cm)	28	56	2
15'x18' (457cm x 549cm)	30	60	2
15'x21' (457cm x 640cm)	35	70	2
15'x24' (457cm x 732cm)	40	80	2
15'x27' (457cm x 823cm)	45	90	2
18'x24' (549cm x 732cm)	48	96	2
18'x27' (549cm x 823cm)	54	108	3
18'x30' (549cm x 914cm)	60	120	3
21'x27' (640cm x 823cm)	63	126	3
21'x30' (640cm x 914cm)	70	140	3
21'x33' (640cm x 1006cm)	77	154	4
27'x27' (823cm x 823cm)	81	162	4
24'x33' (732cm x 1006cm)	88	176	4
30'x30' (914cm x 914cm)	100	200	4
30'x33' (914cm x 1006cm)	110	220	5
30'x36' (914cm x 1097cm)	120	240	5

Contact your SICO sales representative to discuss your specific dance floor needs.