



SICO AMERICA INC.
7525 Cahill Road
Minneapolis, MN 55439, USA

Customer Service:
1-800-424-0796
Website: www.sicoinc.com

LB TABLE OPERATING INSTRUCTIONS

TO OPEN



1 Release transport lock. Grasp both tops low and force outward.



2 As table opens, ease downward.




3 Align table in position before legs reach the floor.

TO FOLD



1 Standing at center of table, grasp tops with each hand.

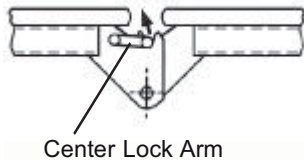

2 Raise center lock arm and hold against table top. Grasp top and lift table slightly.



3 Raise table with a continuous upward motion. Lift with your legs.



4 Grasp tops low and push together until transport lock engages pin.

When Ordering:

All Parts. Indicate table Serial No., height, length, Serial No. is on frame, near center of table.

Tops. Indicate color, size

Legs and Center Frames.

Indicate table height and leg/center frame finish and color


For parts or pricing, contact your local dealer or SICO Customer Service.

MAINTENANCE:

Oil pivot points every six months. Wash tops with soap and water.

Item	Description
1	Nut Stop .38-24
2	Torsion Bar Assembly
4	Tension Bar
6	Top
7	Center Leg Weldment
8	End Leg Weldment
9	Center Leg Weldment
10	Top Frame Weldment
12	Screw C HH .38-24x1.25
13	Torsion Bar
14	Drive Screw
21	Rivet Drive .25 x .53
22	Screw C HH .38-24 x 1.00
23	Push Nut .38 Cup
24	Push Nut .38 Washer
25	Glide Cap Round 1.00
30	Push Nut Washer .50
32	Lock Arm 1/2 Diameter
33	Swivel Caster, 4"
34	Screw C HH .38-24 x 2.25
35	Screw C HH .38-24 x 2.00
36	Screw C HH .50-13 x 1.00
37	Screw C HH .38-24 x 4.50
38	Flat Washer .53 x .88
39	Nut Stop .50-13
40	Acorn Nut .50-13
43	Plug Square .88 x 16ga.
44	Washer L Spring

Item	Description
47	Spacer .50 x .50
49	Glide Cap Round 1.00
50	Plug Square 1.00 Angled
57	Lock rod
58	Hook
59	Vinyl cap, 5/8

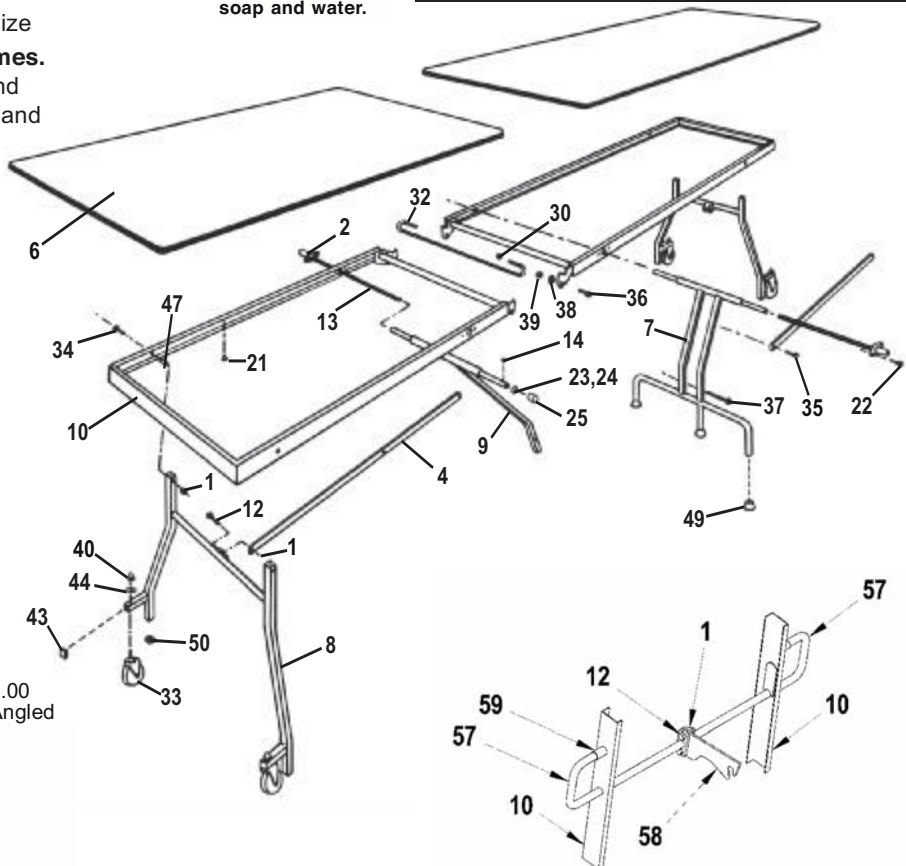


WARNING

To be moved and operated only by an adult.

Before moving, engage the transport lock to prevent tipping.

Failure to follow warnings may result in serious injury or death.

TO ROLL

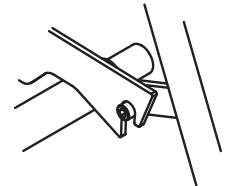


Engage hook before moving.

WARNING

To avoid table tipping over, push from end of table. DO NOT push from side.

Avoid debris on floor.


TC-65 Stool Installation Instructions

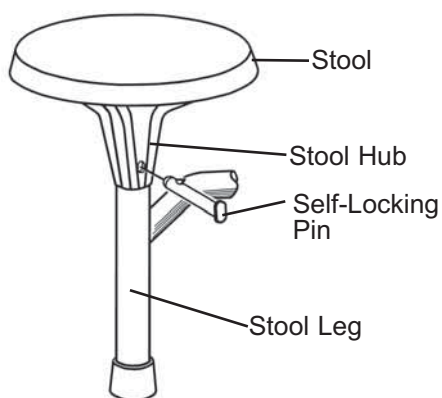

1. Slide the stool over the top of the stool leg.
2. Align the holes in the stool hub with the holes in the stool leg.
3. Orient the Self-Locking Pin with the detent facing up and slide it through the holes of the stool and stool leg until detent activates. The sides of the pin-heads should fit between the ribs of the stool hub.

CAUTION: Self-Locking pin must be installed to prevent excess wear on stool.

TC-65 Stool and Backrest Installation Instructions

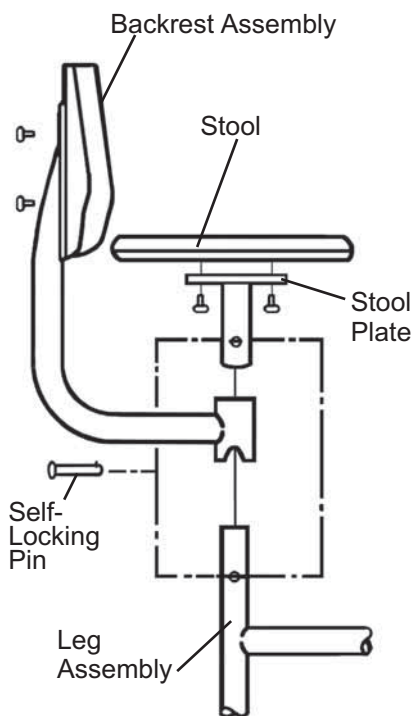

1. Slide the backrest assembly over the stool leg.
2. Insert the stool plate through the backrest and over the leg.
3. Hold up the backrest and align the holes in the stool plate and the leg.
4. Orient the Self-Locking Pin with the detent facing up and slide it through the holes of the stool plate and stool leg until detent activates.
5. Let the backrest slide down and rest on the pin.
6. Rotate the backrest until its notches rest on the pin.

CAUTION: Self-Locking Pin must be installed to prevent excess wear on the stool plate.

To reverse the backrest 180°, grasp the seatback, pull up about 1", then rotate it.