


PILLOW TOP BED

OPERATING INSTRUCTIONS

TO MOVE

Always push from the side.

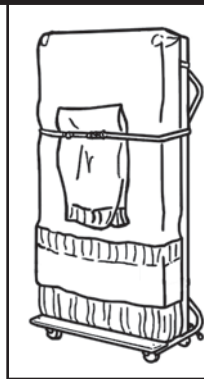

Use caution and care for your back when lifting, pushing, pulling, or lifting and lowering these units. Lift with your legs and hips, not with your back and neck. Never lift more than you are able to safely handle.

TO SET DOWN

Unhook the pillow strap and remove the pillow.

To keep them safely out of the way, the pillow straps **MUST ALWAYS BE REHOOKED** under the bed as shown below.

Carefully lower the Sleeper to the floor.




Note: ALL straps must be tucked away to avoid tripping hazards.

TO CHANGE MATTRESS

Slide the mattress out toward the headboard (without removing the mattress strap).

REPLACEMENT PARTS

Always provide Serial No. when ordering parts (see data plate on end of unit).

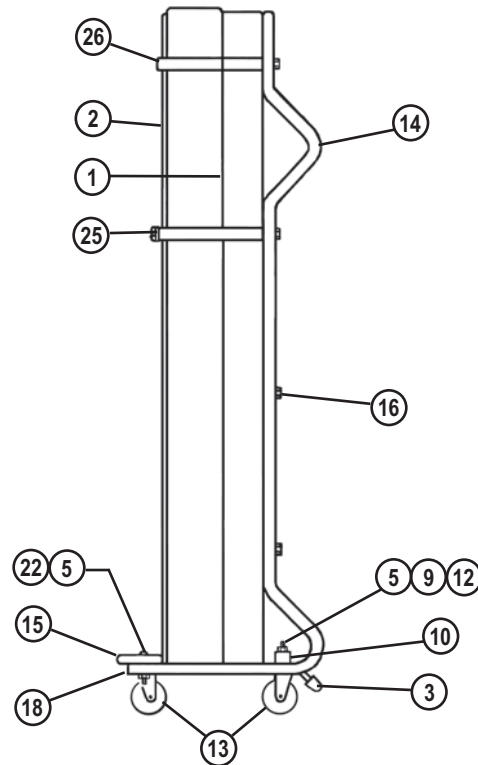

Item No.

- 1 Foundation
- 2 Mattress
- 3 Glide, Rubber
- 5 Nut, hex, 5/16-18
- 9 Washer, 5/16"
- 10 1" Tube Plug
- 12 Cap Screw 5/16" x 1 3/4"
- 13 Caster, swivel

Item No.

- 14 Frame
- 15 Headboard
- 16 Screw, #8 x 2-1/2
- 17 Plate, serial number (not shown)
- 18 Cap, 1-1/4" tube
- 22 Bolt, stop, 5/16-18 x 1 3/4
- 25 Strap, pillow
- 26 Strap, Mattress



SICO AMERICA INC., 7525 Cahill Road, Minneapolis, MN 55439-2738

Telephone: (800) 424-0796

Website: www.sicoinc.com

Fax: (952) 829-5141

Part No. 118581

Rev.: B Date: APR-10

Printed in USA APR-10