




SICO AMERICA INC.
 7525 Cahill Road
 Minneapolis, MN 55439, USA
 Customer Service: 1-800-424-0796
 Website: www.sicoinc.com


2800 TABLE

Operating Instructions and Parts List


Folded for storage.

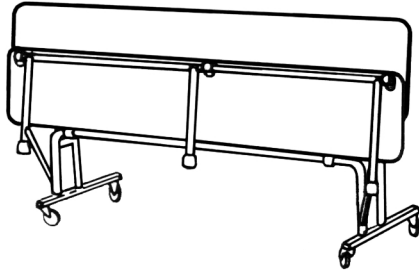

Used as seat with backrest

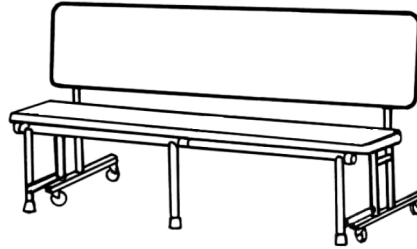

Used as table with bench.

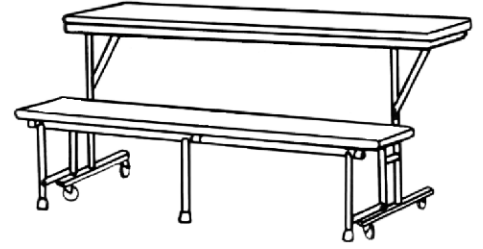

TO BE USED AS SEAT AND BACKREST:

①




Grasp seat at the center.

②



Rotate seat down.


③

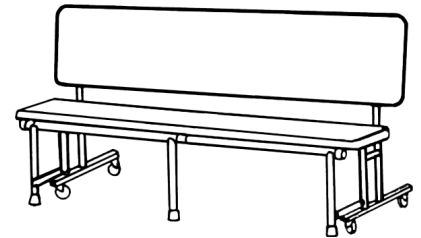

Seat with backrest is ready.


TO BE USED AS TABLE WITH BENCH:

①

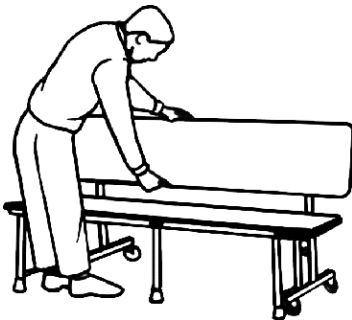


Grasp the backrest at lower center.

②

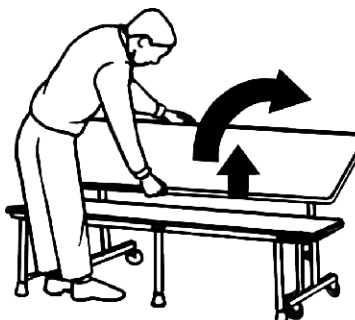

Pull up and rotate backwards.


③

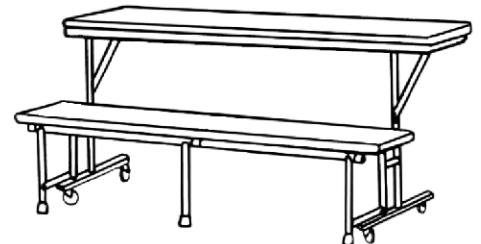

Push away from you until the top locks.


TO UNLOCK TOP:

①

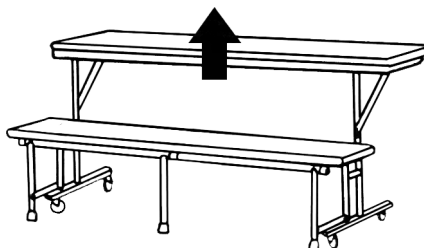


Pull up top, vertically, about 1/2 inch.

②

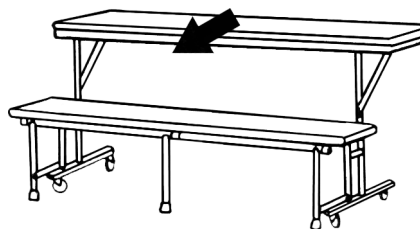

Pull toward you horizontally.

③

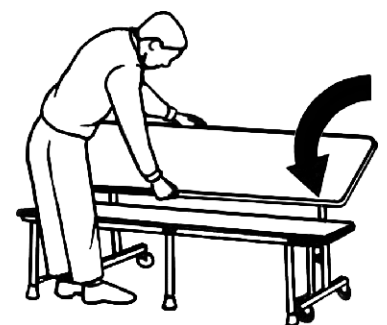


Rotate top down.

NOTE: DO NOT tighten bolts and nuts at pivot points and slides.
Maintenance: Lubricate pivot points twice a year.

IMPORTANT:
Please include Serial
Number of table when
ordering parts.

NOTE:
Installation requires
two 9/16" wrenches

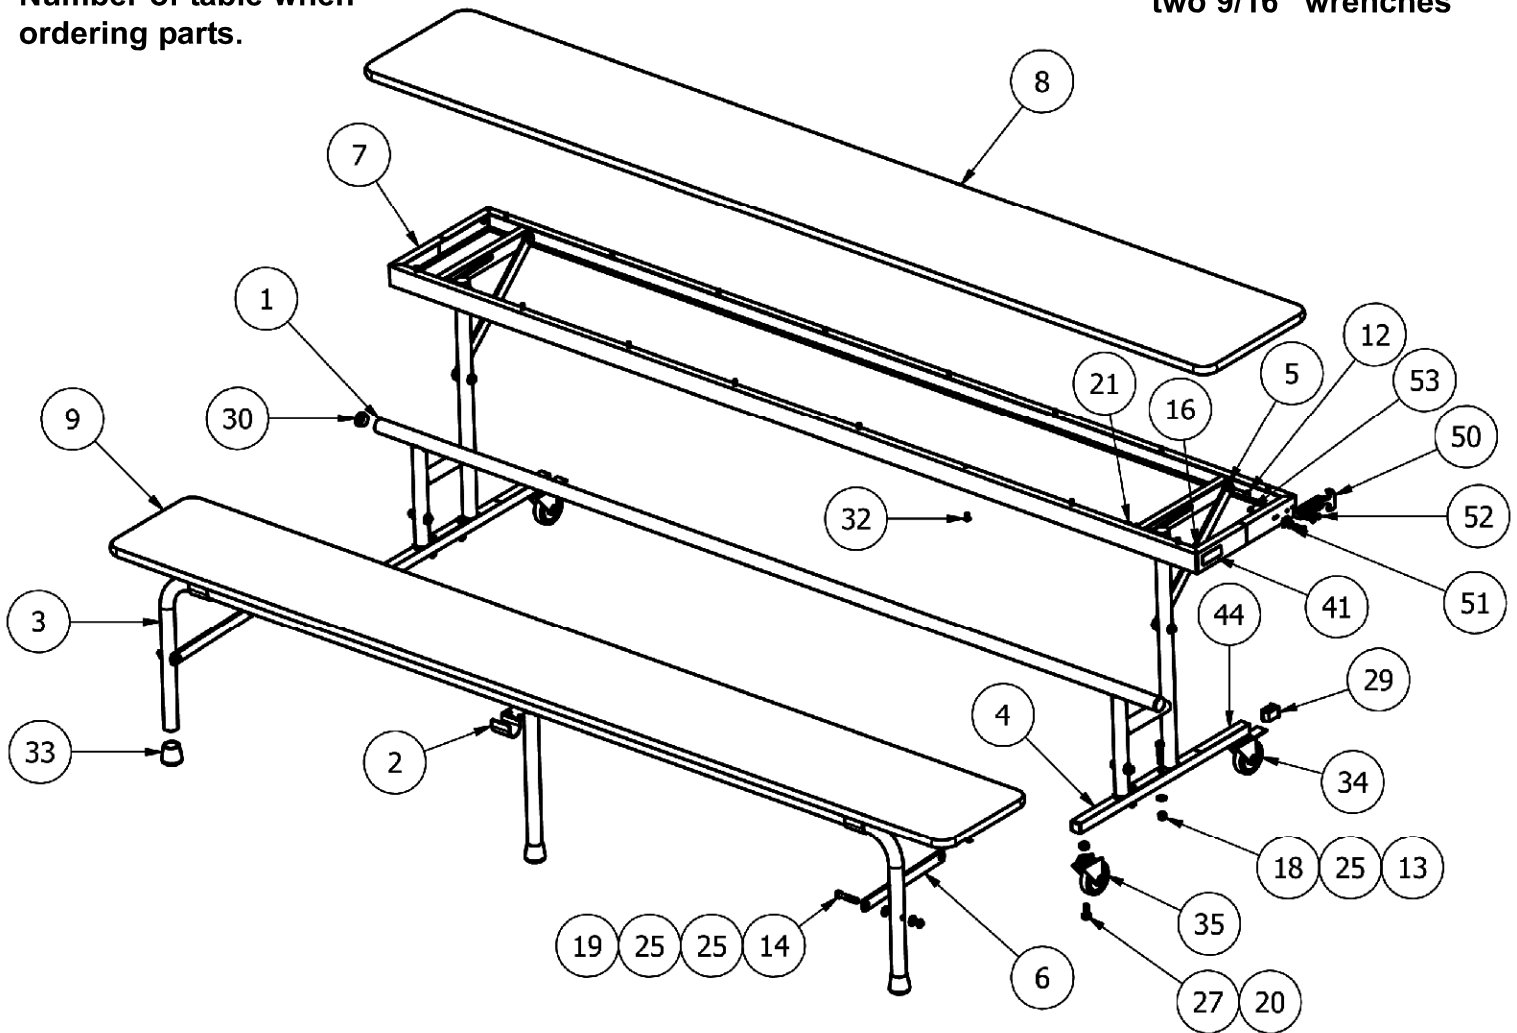

SICO MODEL 2800 CONVERTIBLE BENCH TABLE

Component Parts List

Ref No.	Description	Ref No.	Description
1	Chassis Weldment	20	Nut Stop M10 x 1.5 x 25mm
2	Clamp	21	3/8-16 Stop Nut
3	Leg Weldment	25	Washer FL 0.41 x 0.82 x0.06
4	Caster Beam	27	Screw CHH M10 x 1.5 x 25mm
5	Top Leveler	29	Square Tube Cap Plug 1"
6	Leg Leveler	30	Plug Round 1.25 x 14ga
7	Top Frame Weldment	32	Rivet Drive
8	Top	33	1-1/4" Glide, Black
9	Bench	34	3" Swivel Caster (locking)
12	3/8-24 x 1-1/4" Cap Screw	35	3" Swivel Caster
13	3/8-24 x 1-3/4" Cap Screw	50	Flexible Latch Assembly
14	3/8-24 x 2" Cap Screw	51	Keeper Assembly
16	3/8-24 x 2-1/2" Cap Screw	52	Screw M5-0.8x25mm
18	3/8-24 Stop Nut	53	Nut M5 x 0.8
19	3/8-24 Jam Nut		