


SICO MOBILE SLEEPER

OPERATING INSTRUCTIONS

TO MOVE

Always push from the side.

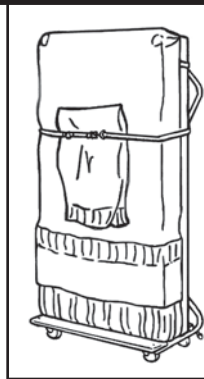

Use caution and care for your back when lifting, pushing, pulling, or lifting and lowering these units. Lift with your legs and hips, not with your back and neck. Never lift more than you are able to safely handle.

TO SET DOWN

Unhook the pillow straps and remove the pillow.

To keep them safely out of the way, the pillow straps **MUST ALWAYS BE REHOOKED** under the bed as shown below.

Carefully lower the Sleeper to the floor.




Note: ALL straps must be tucked away to avoid tripping hazards.

TO CHANGE MATTRESS

Slide the mattress out toward the headboard (without removing the mattress strap).

REPLACEMENT PARTS

Always provide Serial No. when ordering parts (see data plate on end of unit).

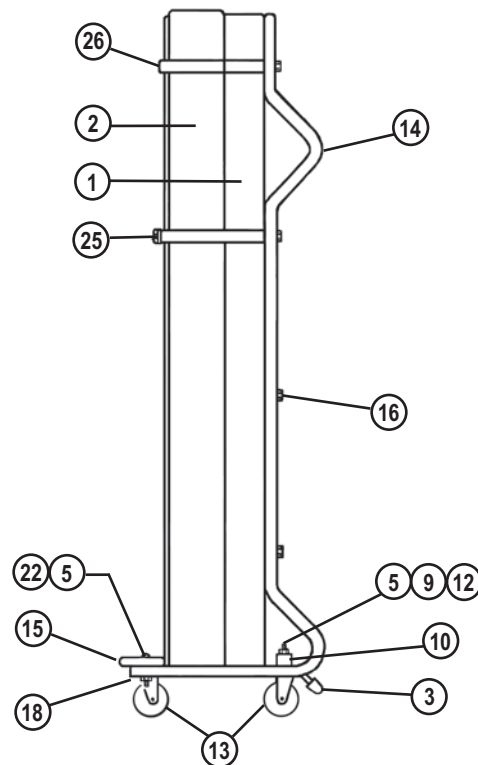

Item No.	Description	Item No.	Description
1	Foundation	14	Frame
2	Mattress	15	Headboard
3	Glide, Rubber	16	Screw, #8 x 2-1/2"
5	Nut, hex, 5/16-18	17	Plate, serial number (not shown)
9	Washer, 5/16"	18	Cap, 1-1/4" tube
10	1" Tube Plug	22	Bolt, stop, 5/16-18 x 1 3/4"
12	Cap Screw 5/16" x 1-3/4"	25	Strap, pillow
13	Caster, swivel	26	Strap, Mattress



SICO AMERICA INC., 7525 Cahill Road, Minneapolis, MN 55439-2738

Telephone: (800) 424-0796

Fax: (952) 829-5141

Website: www.sicoinc.com

Part No. 108047

Rev.: E Date: APR-10

Printed in USA APR-10