

SICO AMERICA INC. 7525 Cahill Road

Minneapolis, MN 55439, USA Customer Service: 1-800-424-0796

Website: www.sicoinc.com

#### **Operating Instructions** and Parts List

**GRADUATE TABLE** 



Lift on side of table top while pressing in at center. As table starts to open, push top down to safety stop position.

# Lift stop bar (#28 below) out of latch on leg.

3 Lift center lock arm to relelase it, then press table top down flat.

> To gain space for passing through doorway or for

### **AWARNING**

Failure to follow warnings may result in serious injury or death. Never let children move table.


Never store where unattended children are present.

To avoid table tipping over, push from end of table. DO NOT push from side.

Avoid debris on floor.



#### TO FOLD

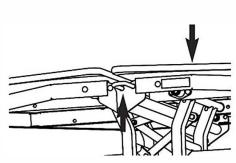

Lift center lock arm and hold against table top. Raise table with continuous upward motion.

# storage, raise stop bar (inside the frame). Push from end of table, not from side.

ITEM DESCRIPTION

- TOP FRAME WELD
- 2 **DRIVE RIVET**
- 3 **RETAINER CAP - LEG**
- WLD, PIVOT STOP BAR
- MECHANICAL STRUT
- **TENSION BAR** 6
- X BAR
- 8 LOCK ARM
- **NUT PUSH WASHER**
- 10 FLANGE WASHER
- 11 BOLT M12 x 1.75 x 30
- 12 NUT STOP M12x1.75MM
- 13 SHOULDER WASHER
- 14 PANEL FASTENER
- CAP SCREW M10x1.5x30MM 15
- 16 CAP SCREW M10X1.5X35MM
- 17 NUT STOP M10x1.5MM
- 18 CAP SCREW M10X1.5X60MM
- 19 CAP SCREW .38-24X1.25
- WASHER, 3/8" SAE 20
- NUT STOP, 0.38-24 NF 21
- 22 GLIDE
- **CAP VINYL 1.00X.38** 23
- 25 **TABLE WARNING**
- 26 **LUBRICATION LABEL**
- 32 PARTS LIST & INST SHEET
- 90 **TABLE TOP**
- 93 CASTER, 4IN W/THREAD GUARD
- 94 CENTER LEG WELDMENT
- 95 **OUTER LEG WELDMENT**
- 96 STOOL ASSEMBLY, SERIES 4
- 97
- SCREW, M8-1.25x45
- **LOCK NUT, M8-1.25**


MAINTENANCE: Oil pivot points every six months. Wash tops with soap and water. When ordering:


All Parts - Indicate table Serial No. (on frame, near center of table), height and length


Tops - Indicate color, size Legs - Indicate table height

TO ROLL

For parts or pricing contact your local dealer or SICO Customer Service.

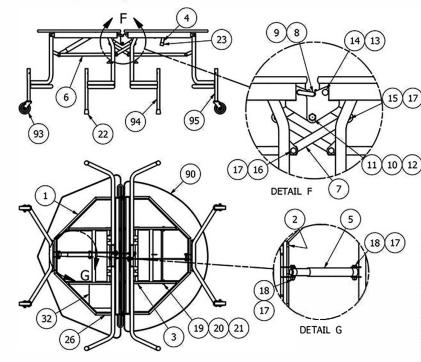

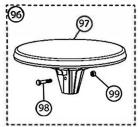

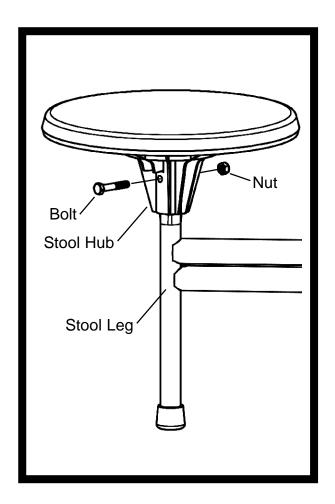

## **TC-65 Stool Installation**

- 1. Align the holes in the stool hub with the holes in the stool leg.
- 2. Slide the stool over the top of the stool leg.
- Slide the bolt through the holes of the stool and stool leg. Tighten nut and bolt with two 13mm wrenches.

**CAUTION**: The bolt and nut must be installed to prevent excess wear on stool.