


TC-65 Stool Installation Instructions

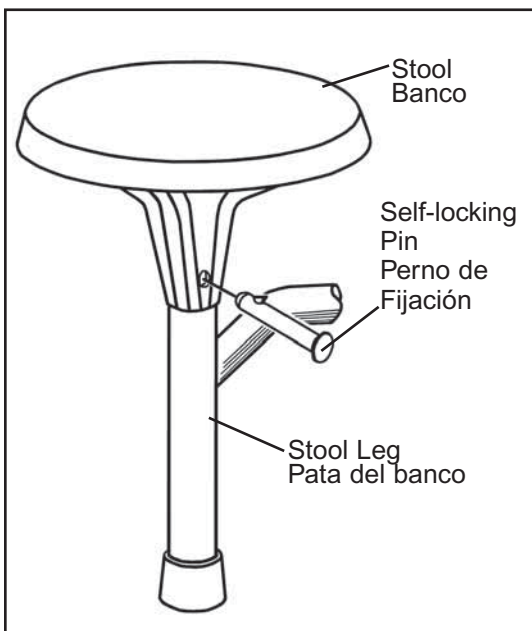

1. Slide the stool over the top of the stool leg.
2. Align the holes in the stool hub with the holes in the stool leg.
3. Orient the Self-Locking Pin with the detent facing up and slide it through the holes of the stool and stool leg until detent activates.

CAUTION: Self-Locking pin must be installed to prevent excess wear on stool.

Instrucciones de Instalación del Banco TC-65

1. Deslice el banco sobre la parte superior de la pata.
2. Alinie los orificios que se encuentran en el cubo del banco con los orificios de la pata.
3. Oriente el perno de Uno mismo-Fijacio'n (# 19) con los revestimientos de la muesca para arriba y resbálo a través de los agujeros del taburete y de la pierna del taburete hasta que la muesca activa.

PRECAUCIÓN: La Uno mismo-Fijacio'n del perno se debe instalar para prevenir exceso de desgaste en taburete.