




SICO AMERICA INC.
7525 Cahill Road
Minneapolis, MN 55439, USA
Customer Service: 1-800-424-0796
Website: www.sicoinc.com


Operating Instructions and Parts List

TC-65 FOLDING STOOL TABLE


TO OPEN

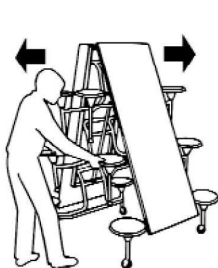

1 Release transport lock. Grasp middle stools, force outward.

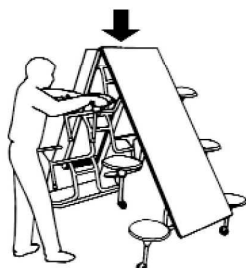


2 As table starts to open, push stools downward toward floor.

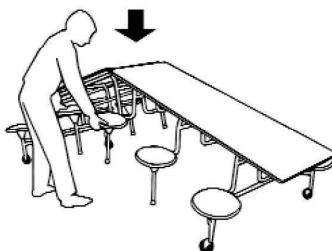


3 Retain grip on stools, ease table down. Align in position before table legs reach floor.


TO FOLD

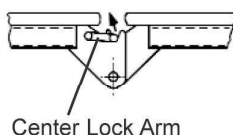

1 Raise center lock arm and hold against table top. Grasp a stool and lift table slightly.

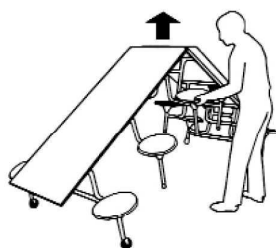

2 Grasp two stools at center of table. Lifting with your legs, raise table with continuous upward motion.

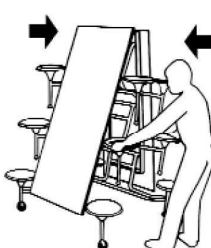

3 To close, grasp edges of stools and pull toward center. Make sure lock is engaged.


WARNING

To be moved and operated only by an adult.

Before moving, engage the transport lock to prevent tipping.

Failure to follow warnings may result in serious injury or death.

TO ROLL



Engage hook before moving.

WARNING

To avoid table tipping over, push from end of table. DO NOT push from side.

Avoid debris on floor.

ITEM	DESCRIPTION
1	TOP FRAME WELD
2	RETAINER CAP - LEG
3	GLIDE
4	DRIVE RIVET
5	SHOULDER WASHER
6	PANEL FASTENER
7	LOCK ARM
8	NUT PUSH WASHER
9	FLANGE WASHER
10	CAP SCREW M12x1.75x30MM
11	NUT STOP M10x1.75MM
12	BAR, TENSION
13	MECHANICAL STRUT
14	X BAR
15	PADEYE
16	CAP SCREW M10x1.5x60MM
17	NUT STOP M10x1.5MM
18	LOCK ROD WELDMENT
19	TUBE CAP
20	SHOULDER BOLT .38-16x1.00
21	CAP SCREW M10x1.5x30MM
22	NUT STOP, .38-16 THIN
23	CAP SCREW .38-24X1.25
24	CAP SCREW .38-24 X 1.00
25	CAP SCREW M10X1.5X35MM
26	NUT STOP, .38-24 NF
28	TC HOOK
30	LUBRICATION LABEL
32	INSTRUCTION SHEET
33	TIP OVER WARNING LABEL
34	RIVET, BLIND
90	TABLE TOP
93	CASTER, 4IN W/THREAD GUARD
94	END LEG WELDMENT
95	CENTER LEG WELDMENT
96	STOOL ASSEMBLY, SERIES 4
97	STOOL
98	SCREW, M8-1.25x45
99	LOCK NUT, M8-1.25



MAINTENANCE: Oil pivot points every six months. Wash tops with soap and water.


When ordering:

All Parts - Indicate table Serial No. (on frame, near center of table), height and length

Tops - Indicate color, size **Legs** - Indicate table height

For parts or pricing contact your local dealer or SICO Customer Service.

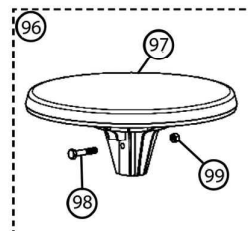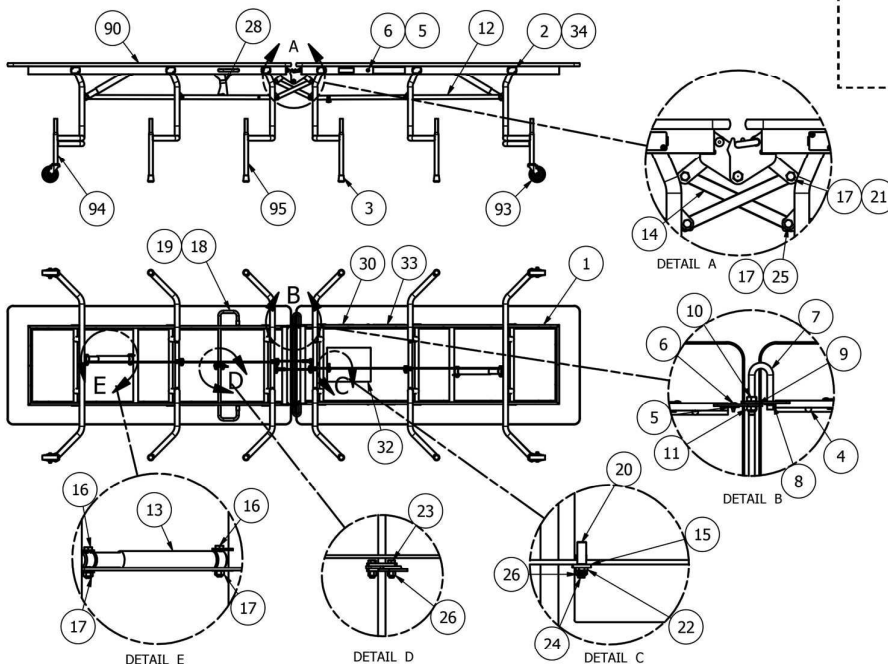

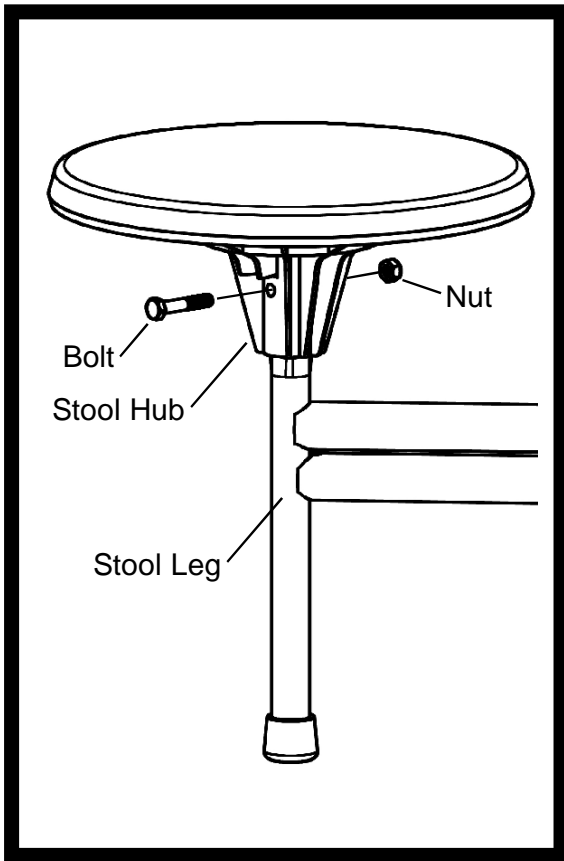

TC-65 Stool Installation

1. Align the holes in the stool hub with the holes in the stool leg.
2. Slide the stool over the top of the stool leg.
3. Slide the bolt through the holes of the stool and stool leg. Tighten nut and bolt with two 13mm wrenches.

CAUTION: The bolt and nut must be installed to prevent excess wear on stool.